

GigaLAN Driver Installation Guide

Version: V686 Update: 20090922

Trademarks

Some of the product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Revision History

Version	Date	Description
V686	Aug. 2009	Release

Remark:

The below installation procedure is based on the version v686 and using Windows XP as an example, the installation procedure might slightly differ depending on the OS installed.

Driver Installation Procedure

Insert the Driver CD into your CD driver prior connected to the system then follow the installation instructions in the Setup Wizard.

Detail instruction as below:

1. You can find the driver menu in the attached driver CD, please click the <Win9X, ME,2K, XP> in the <PCI-E 1000Mb LAN> section. The procedure might slightly differ depending on the OS version installed.


Driver list

Model name (Motherboard)	Function	OS	Note
	Chipset	Windows	Installation Guide
	Intel SATA AHCI	Windows driver	User manual
	VGA	Win2K, XP	Installation Guide
Win2K, XP		IEGD driver Use for CRT output only	
Vista			
	Linux		
	Audio	Win2K, XP, 2003	Installation Guide
	• Realtek HD Codec	Vista	
		Linux	
	Windows XP update	Dual Core CPU	
		Chipset	
	Touch Screen auto detect / install program. Use for:		
	• ELO	Windows	Read Me
	• POS Touch		
	• POS Touch-HID		
	• POS Touch+		
	Touch Screen	DOS	
	• ELO Touch	Windows	v463
		WindowsAlpha	Installation Guide
		Linux	v481 (alpha driver)
	Touch Screen	DOS	
	• POSTouch	Windows	Installation Guide
		Linux	
	PCI-E 1000Mb LAN	DOS	
	• Realtek RTL8111	Win9X, ME, 2K, XP	Installation Guide
		Vista	
		Linux	
	Mini PCI-E IEEE802.11b/g/n Wireless LAN	Win2K, XP	
	• WS32L	Vista	
	• WS33N	WinXP 64bit	
		Vista 64bit	
	BIOS flash utility	DOS	
	Hardware Monitor	Windows	
	Watch Dog Timer (WDT) demo tool	DOS	With C language source code
		Windows	With VB language source code
		Programming guide	
	Cash Drawer controller test utility (use I/O port 0x48C)	DOS	With C language source code
	Finger Print Module	SDK for Windows and Linux	
	• U4500	Demo and Test program (Windows)	Installation and User Guide
	Magnetic Card Reader		
	• S64 series	Windows	Utility
	Magnetic Card Reader		
	• IDMB series	Windows	Utility
	P07303 series 20*2 VFD Customer Display		
	• Demo tool	DOS	User's manual V1.7


2. Click <v686> folder.




3. Click <setup.exe> to start installation.

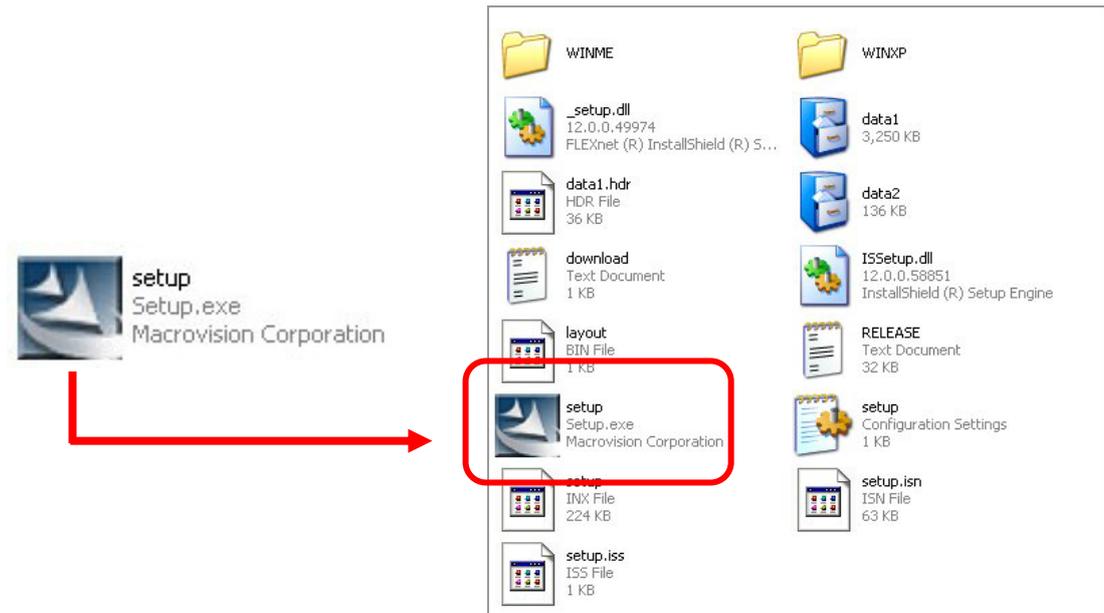


4. InstallShield Wizard is preparing the setup.

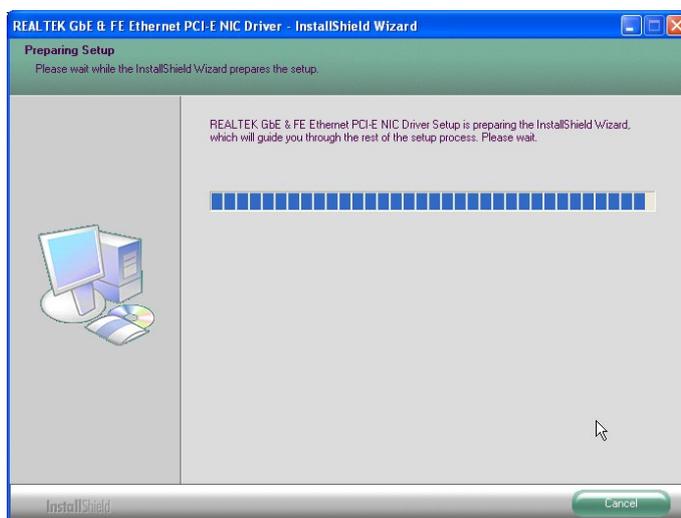


5. Select an options <Modify>, <Repair> or <Remove> and click <Next>.

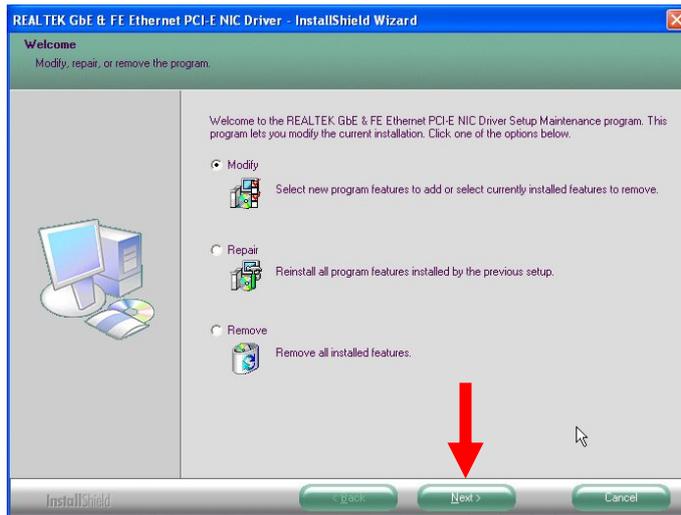

6. Click <Next>

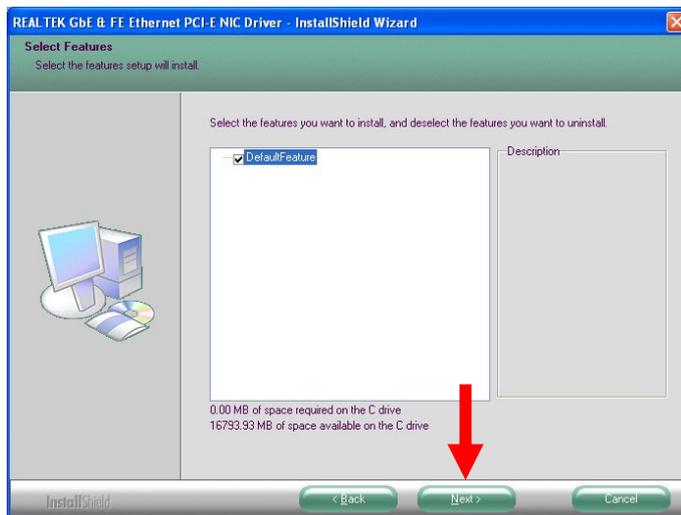


7. The Setup Status is running.

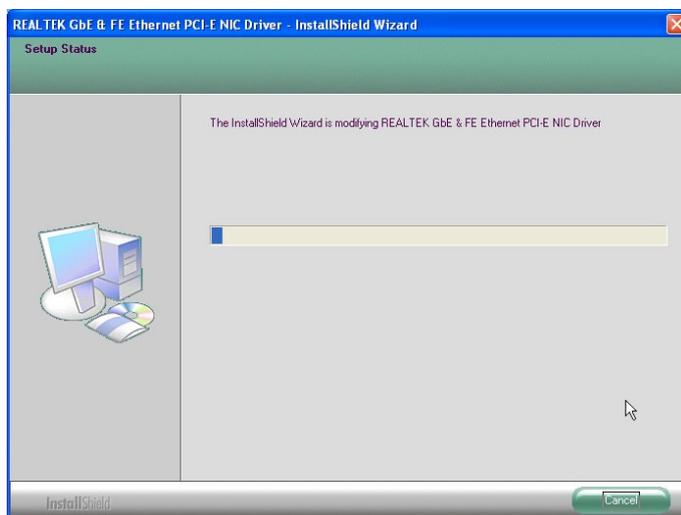

8. Select an option in the Hardware Wizard dialog and click <Next>.



9. Select <Install the software automatically (Recommended)> and click <Next>

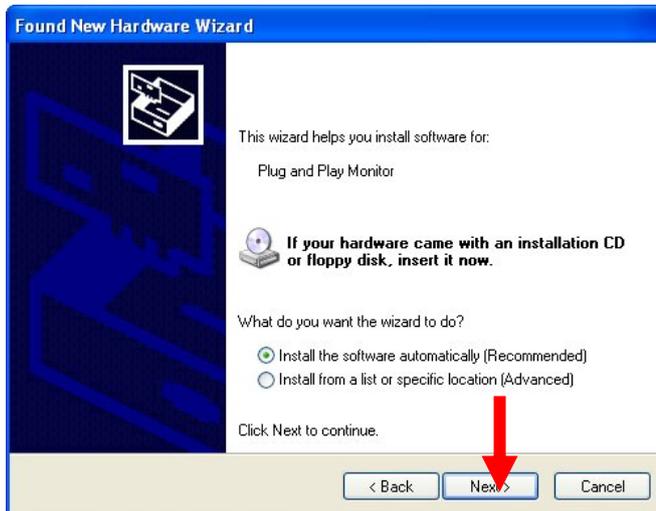

10. <Found New Hardware Wizard> is running.



Click <Finish> to complete the <Found New Hardware Wizard>.



11. Click <Finish>.

