USB2.0 Driver Installation Guide

Update: 20091002

Trademarks

Some of the product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Revision History

Version	Date	Description
N/C	Oct. 2009	Release

Remark:

The below installation procedure uses Windows XP as an example, the installation procedure might slightly differ depending on the OS installed.

OS Requirements

OS	USB 2.0 requirements
Windows XP	USB 2.0 drivers are provided in <u>Service Pack 1</u> (SP1) for Windows XP, which is available through <u>Windows Update</u> .
Windows 2000	USB 2.0 drivers are available through <u>Windows Update</u> or Service Pack 4.
Windows 98SE/Me	USB 2.0 drivers are available on the Intel developer site.
Windows 98 (Retail)	Developers and OEMs should contact <u>Orange Ware</u> . For end-users, if your device does not ship with Windows 98 drivers, contact your device or system manufacturer. If USB 2.0 drivers are not available, your device will operate at USB 1.1 speeds
Linux	USB 2.0 support is available in <u>kernel 2.4.19</u> or later development kernels, or in the 2.4.19 or later production kernel. <u>More information</u> .

Driver Installation Procedure

1. Right-click on <My Computer> desktop icon and select <Properties> from the drop-down menu.



 Click <Hardware> tab → Click <Device Manager>button on system properties dialog box.

Computer N	lame	Hardware	Advanced
e Add Hardware	Wizard belos	uou install bardu	Nare
	wizara neipa	you matair narav	vare.
	-		
	l	Add <u>H</u> ardwar	e Wizard
2001			
agei na Davica Manag	or lists all the	hardware de	an installed
operties of any de	Jse the Devic vice.	e Manager	hange the
Driver <u>S</u> ignir		<u>D</u> evice Ma	anager
ofiles			
ardware profiles p ferent hardware o	rovide a way configurations	for you to set up	and store
	[Hardware J	Profiles
	ager te Oevice Manag your computer. L operties of any de Driver Signir ofiles ardware profiles p ferent hardware of	ager te Device Manager lists all the your computer. Use the Device perties of any device. Driver Signing ofiles ardware profiles provide a way ferent hardware configurations	Add Hardware Wizard helps you install hardware Add Hardware Wizard helps you install hardware de period de la construction of the service Manager lists all the hardware de period de la construction of the service of the service of the service of the service hardware configurations.

 Click and unfold <Other Devices> → Right-click <Universal Serial Bus (USB) Controller> to access the drop-down menu→ Click <Properties>



4. Select <Driver> tab \rightarrow Click <Update Driver...> button.



5. Click the <Next> button on the welcome window.



6. Select <Search for a suitable...> and click <Next> button on the Install Hardware Device Drivers window.



 Select <Specify a location> and then click <Next> on the Locate Driver Files window.

Where do you want Windows to se	earch for driver files?
Search for driver files for the followi	ing hardware device:
Universal Serial Bus (USI	3) Controller
The wizard searches for suitable dr any of the following optional search	ivers in its driver database on your computer and in h locations that you specify.
To start the search, click Next. If yo insert the floppy disk or CD before	ou are searching on a floppy disk or CD-ROM drive, clicking Next.
Optional search locations:	
Floppy <u>disk</u> drives	
Specify a location	
Microsoft Windows Update	

8. Click <Browse> to select the driver and then click <OK> button to next page.



9. Click <Next> button on the Driver Files Search Results window.



10. Click the <Finish> button to complete this process.



11. Finished.

