




How to enable power and connect the cable for a 580 customer display

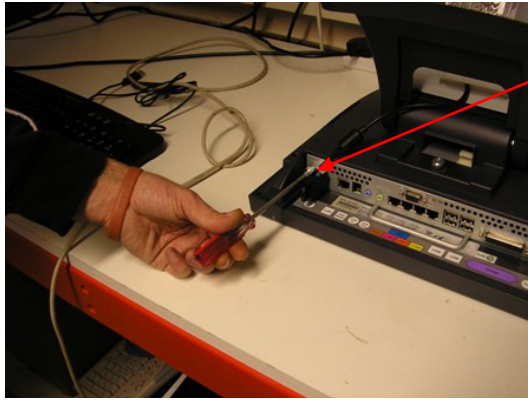

Slacken the two holding screws & slide the main board out of the unit.

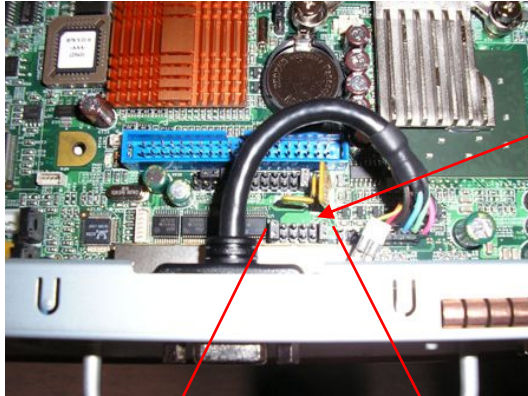


Enable 12V for Com3 or Com4. The Photo shows Com4 enabled

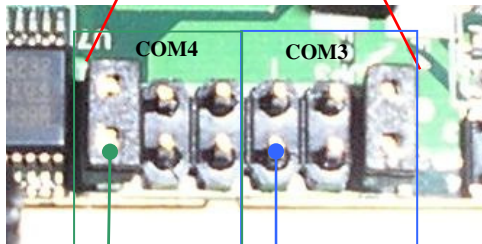

7.2.4. COM3 & COM 4 Power Setting

Function	JP3
COM3 PIN10_RI	⊙ 1-2
COM3 PIN10_+5V	3-4
COM3 PIN10_+12V	● 5-6
COM4 PIN10_RI	⊙ 7-8
COM4 PIN10_+5V	9-10
COM4 PIN10_+12V	11-12

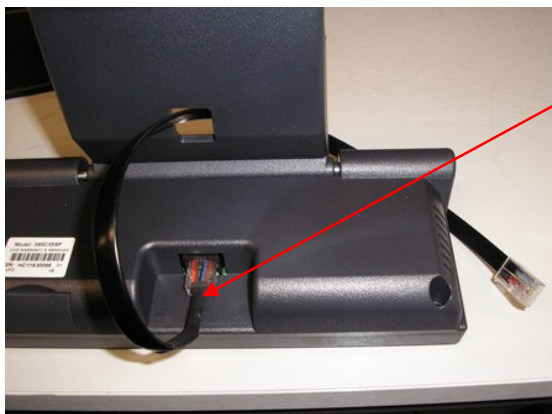

Cable must be fitted correctly. The end with the shrink sleeve goes into the display.