


1. Install Touch driver
2. Run “Touch Utility” to set scale offset




3. Run “Monitors’ Alignment Utility”



4. Touch display to set touch in primary display

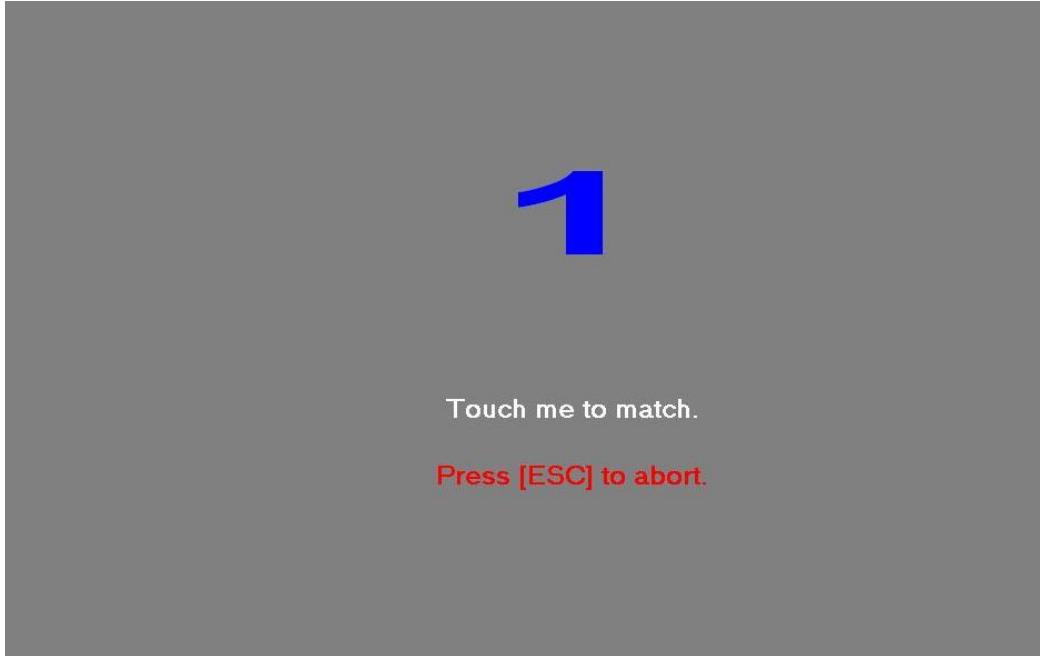

5. Touch display to set touch in second display

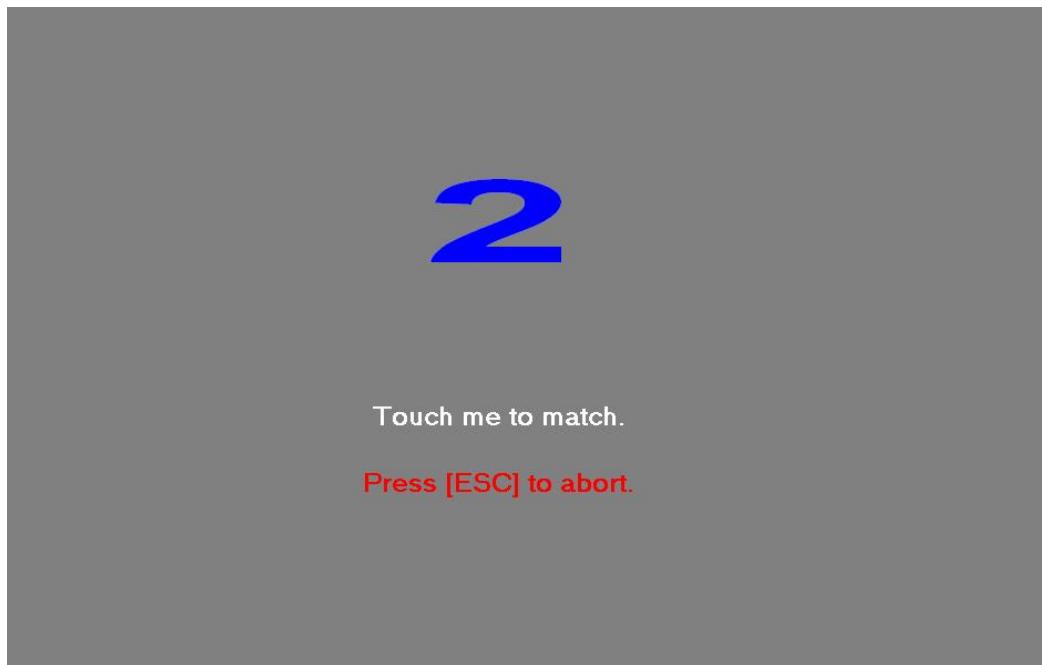

6. Run “ClientDisplay.exe”

